
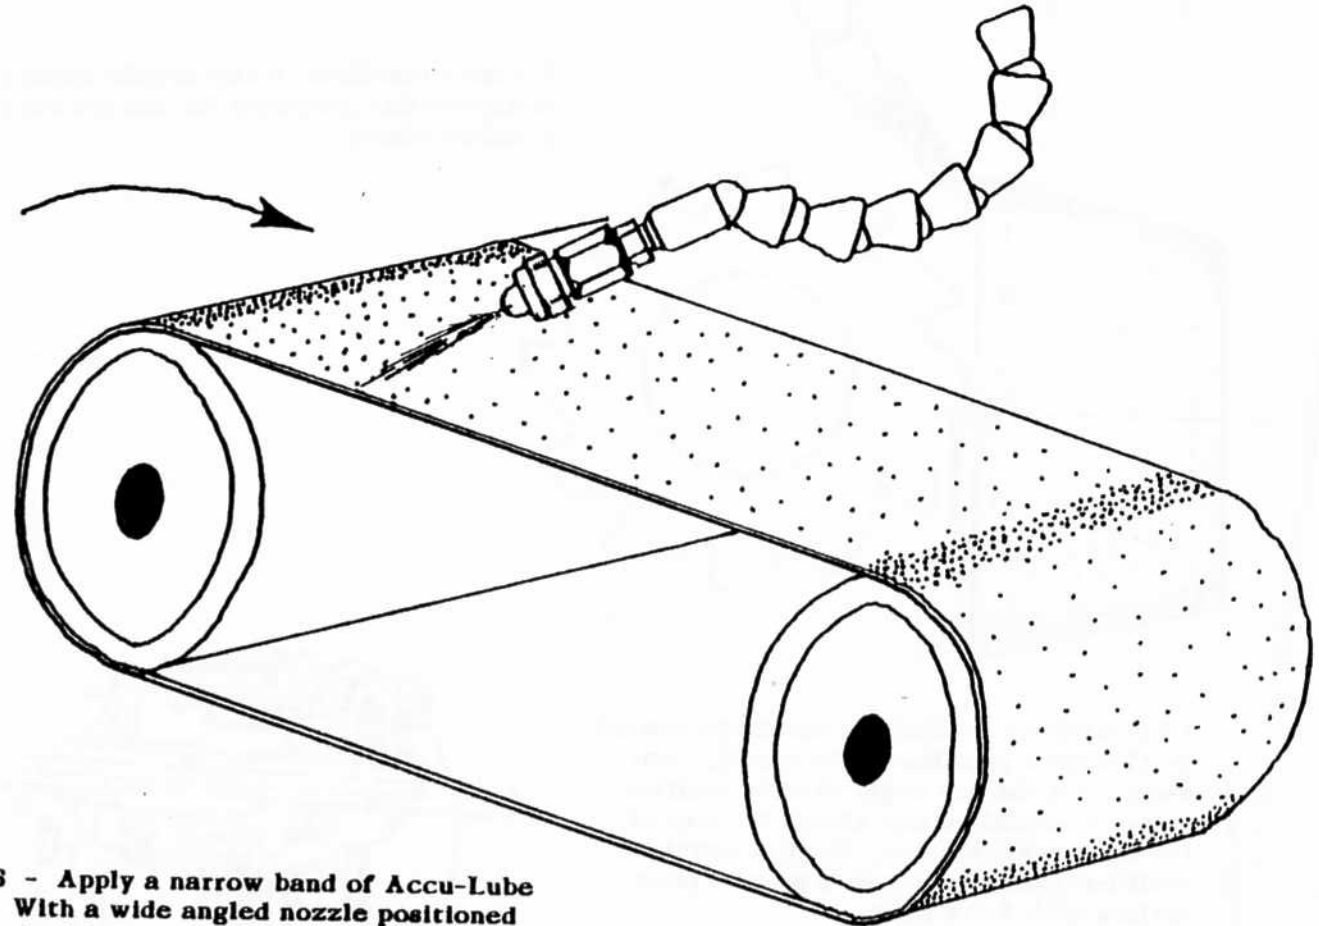


## ABRASIVE BELTS

ACCU-LUBE Applicator

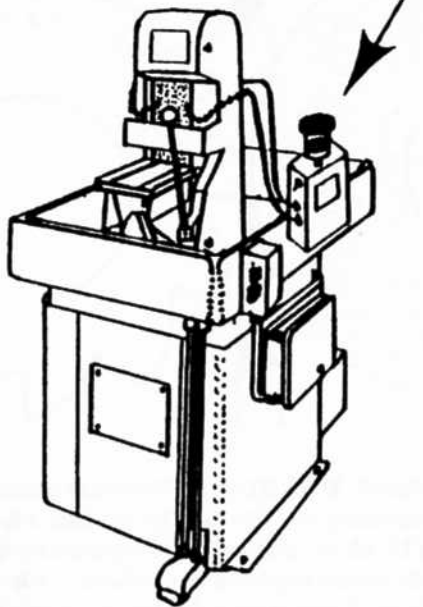

**WIDE ANGLE NOZZLES** - Apply a narrow band of Accu-Lube across an abrasive belt. With a wide angled nozzle positioned about 3" above the belt, the lubricant spray pattern is 5" to 6" wide. Order an applicator with one nozzle for every 6" of belt width. Overlap multi-nozzle spray patterns to ensure complete Accu-Lube coverage across the belt.