
MILLING (Multiple Inserts)

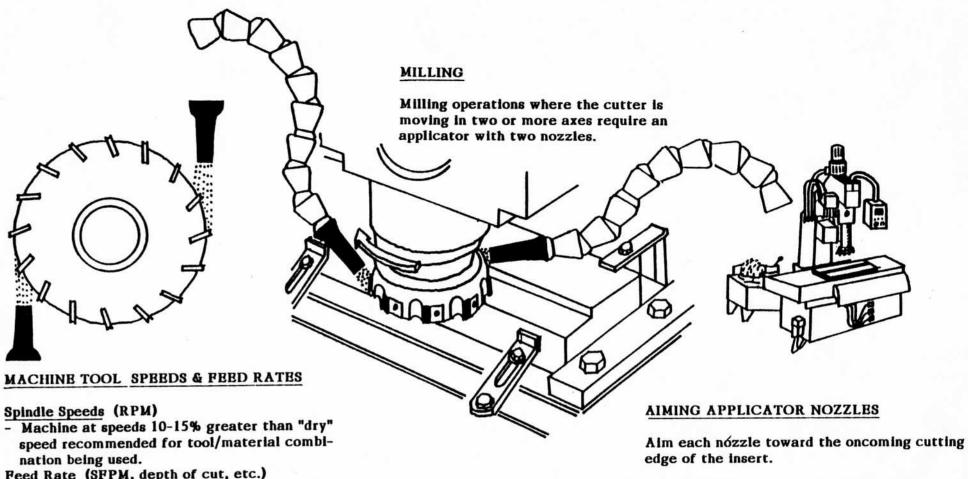

Feed Rate (SFPM, depth of cut, etc.)

- Machine at the maximum rate recommended for the tool/combination being used. Accu-Lube helps achieve maximum "chip load".

FLOW CONTROL VALVE

It may be necessary to adjust applicator air flow to optimize application of Accu-Lube due to turbulence at the cutter workpiece interface.

Initially place nozzle tips 4 - 5 cm from edge of cutter.

Adjust nozzles according to your experiences, tool configuration, workpiece characteristics and obstructions, etc.

The closer the nozzles are to the cutter, the less Accu-Lube is required.